



## Removal

---

1 Remove glove compartment lid (68—120).

2 Compress four cams on lock and pull lock out of glove compartment lid.

**Note:** Use a pinching pliers if possible.

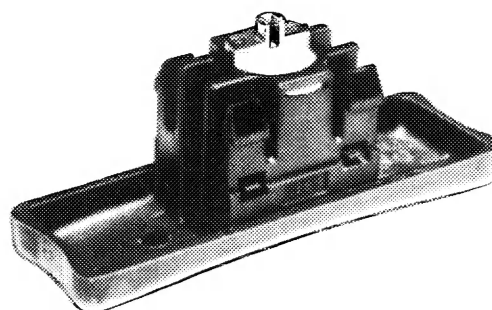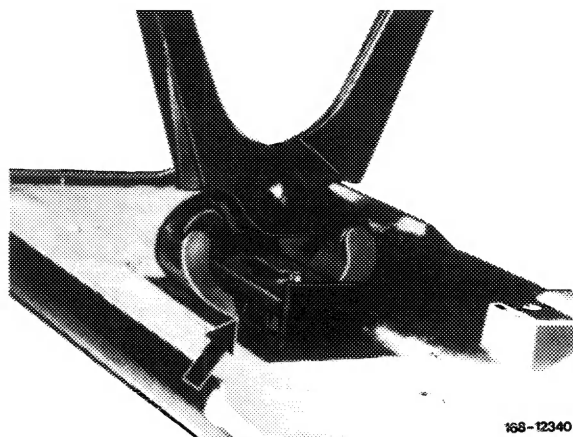

## Installation

---

3 Install in reverse sequence. Note the letters "OBEN" (top) on lock and install accordingly.

